



- 1) Open the film box in subdued lighting.
- 2) Keep the flange facing upward and remove paper band

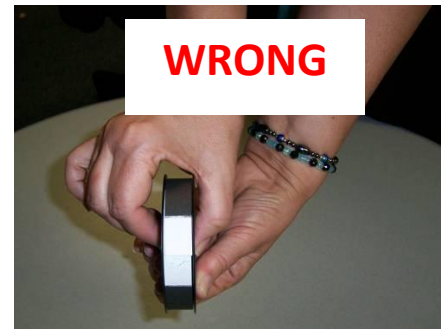

- 3) After removing the cassette cover, lift the Light Guard and line up the reel over the spindle lugs. Place the reel into the cassette on the supply spindle with the number 1 side facing upward.

Spindle Lugs

Light Guard

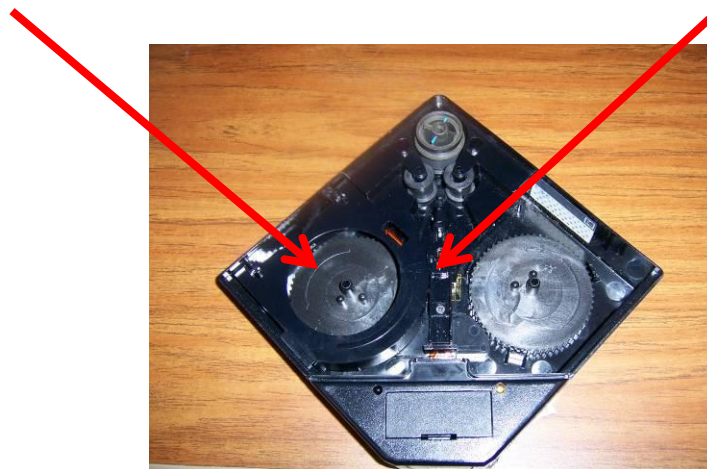


---

4) The film will be coming off the reel in a counter-clockwise direction. Close the Light Guard after loading.




5) Thread the film around the guide roller, drive roller, and idler roller, following the arrows inside the cassette.

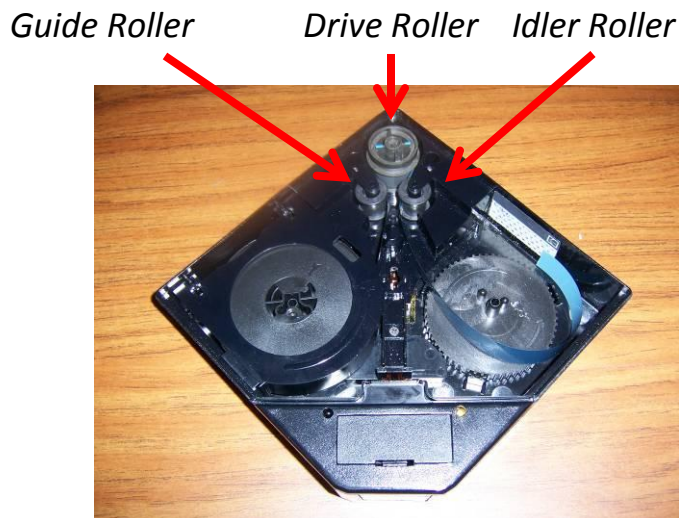

---


6) *Holding the take up reel with the number 1 side upward, insert the film into the slot of the reel and rotate counterclockwise.*

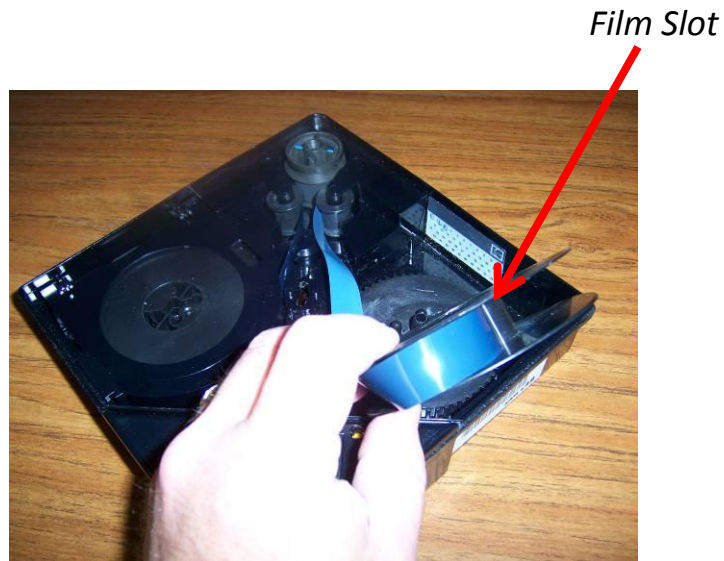

7) *Line up the reel over the spindle lugs and place into cassette.*

8) *Slide the release lever towards the battery compartment and slowly rotate the take up reel counterclockwise three complete turns to secure the film to the reel and allow the release lever to return to normal position.*

*Release Lever*

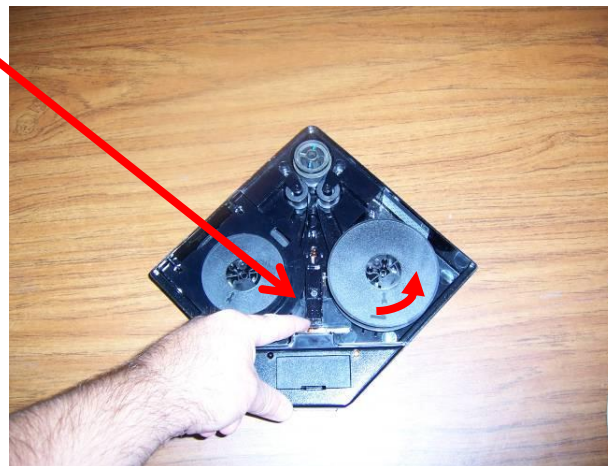

---

9) *Replace Top Cover, if media is properly loaded the media supply gauge will change to the striped pattern.*

