
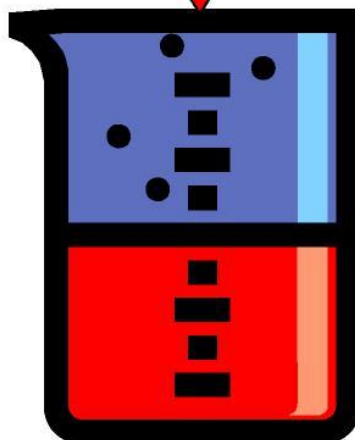


*Full Brown Toning No Processing*

*1:25 Mix Ratio for a Imagelink Archive Processor Brown Toning*

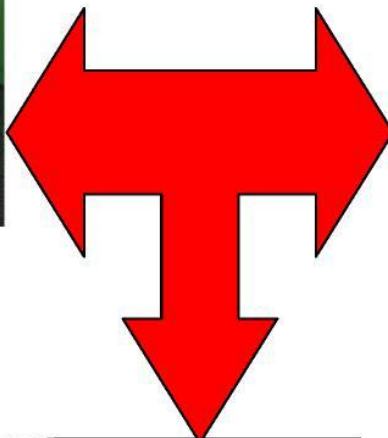


*Pour Brown tone concentrate and water together into a large container*

---

*Stir mixed solution for one minute.*

- *The Processor water temperature should be between 95° F/35° C and 100° F/38° C degrees.*
- *Fill the mix solution into the first five (5) tanks, last tank is wash.*
- *A processor speed of 10 ft/min. will yield a dwell time of 33 seconds*

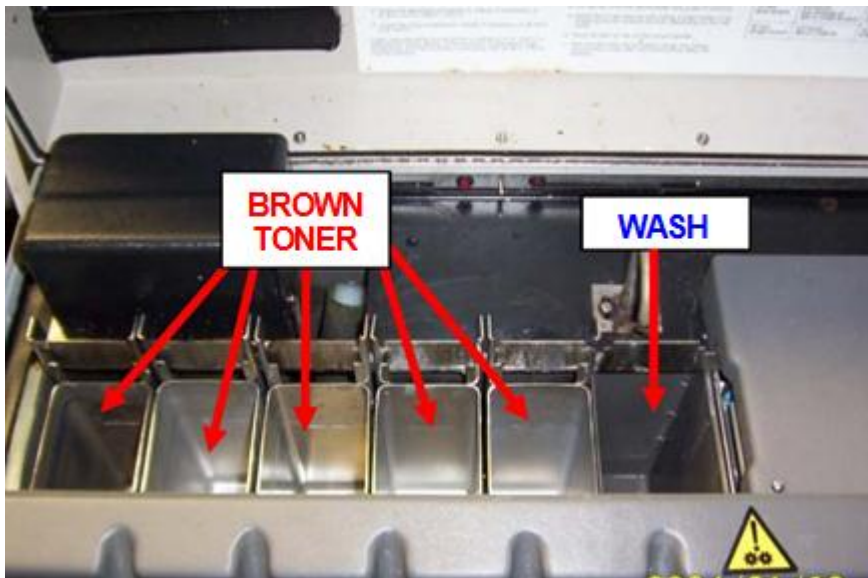

- *To insure proper coverage, follow the certification procedure outlined in EPM Publication A-1671, page 3, "Use of Brown Toner to Extend the Life of Microfilm".*

