


Background density of developed Reference Archive Film is a function of exposure level from the writer and processing parameters. It is recommended as a first step that writer exposure adjustments be made first and lastly consider processor adjustments. Exposure levels in the writer are adjustable by the operator via the Imagelink i9600 Series Writer software user interface as described below.

The recommended background density for Reference Archive Media (Imagelink RA microfilm) is 1.0 +/- .05 with outer limits of 0.90 to 1.10 Users may wish to adjust closer to the lower limit for poor quality originals or towards the upper limit for high quality originals.


Adjusting the exposure on the writer can be done in a few easy steps:

- 1) With the i9600 application open, click on Administration, and then click on Writer

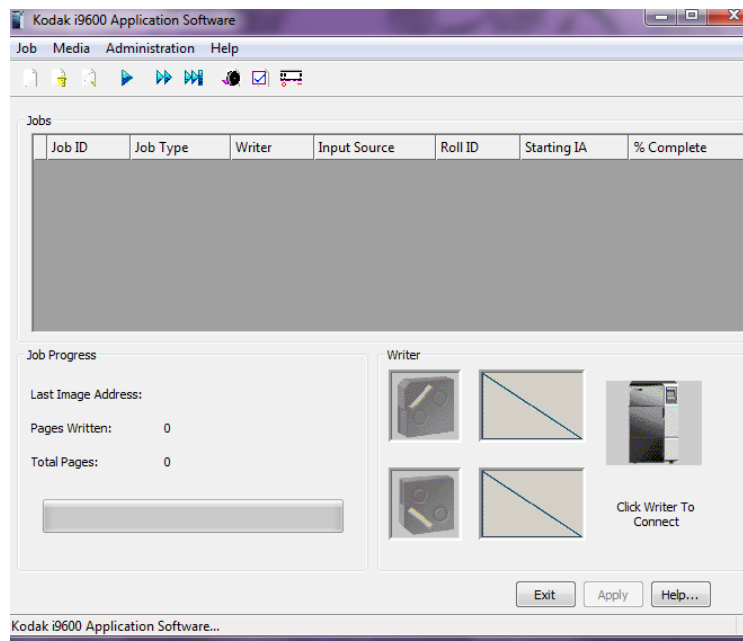


-
- 2) Click on the writer tab and select the Archive Writer you wish to adjust on the drop down list

Note: The Archive Writer must be online to adjust setting.

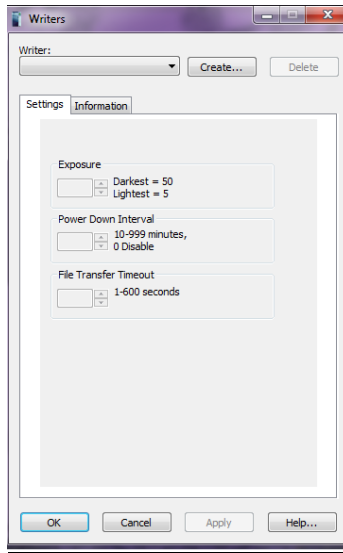

- 3) Using the arrow buttons adjust the exposure setting. Each point will change the density on the film by a .03

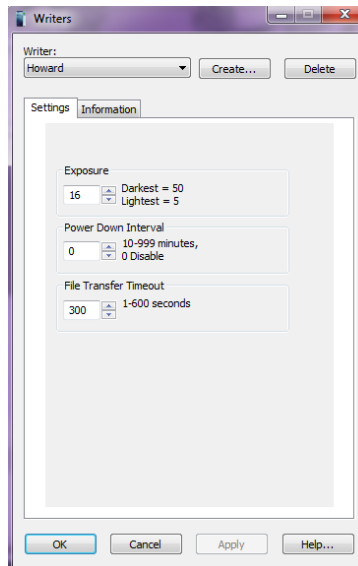

- 4) Click on Apply and OK to close the Writer tab.
5) Run a test to check the density on a blank document.