

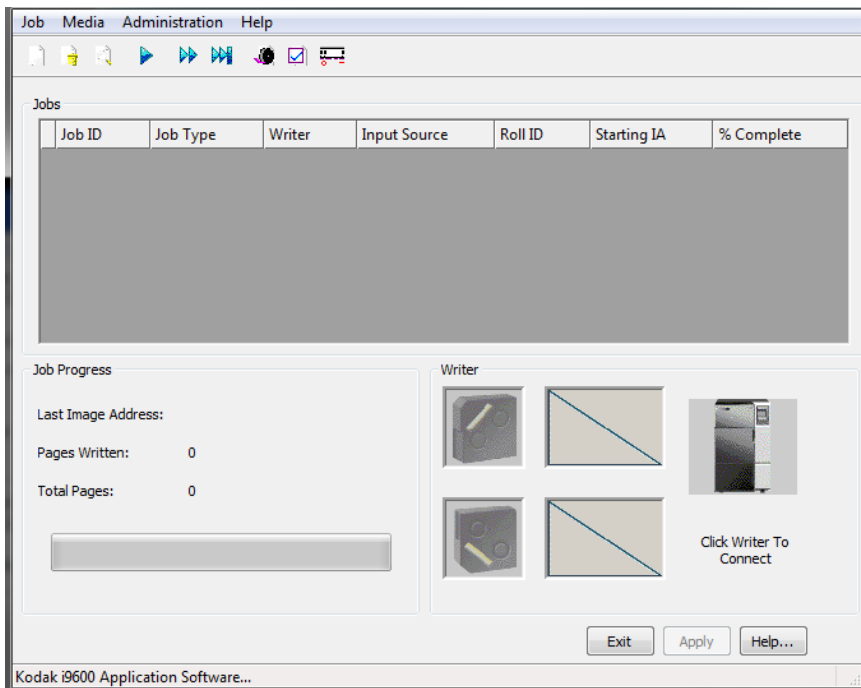


1. Click on the Writer Icon to open the I9600 Application Software

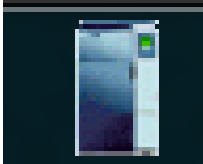

2. Click on Job, then New Job




3. For Job type select Infoguard

| Job ID | Job Type | Writer | Input Source |
|--------|-----------|--------|----------------|
| 590 | Infoguard | DAW | C:\Kodak\sa... |


1. Press the writer icon to connect to the writer




2. The screen will show the film footage after connecting
(Please Note in the example picture two cassettes are loaded)

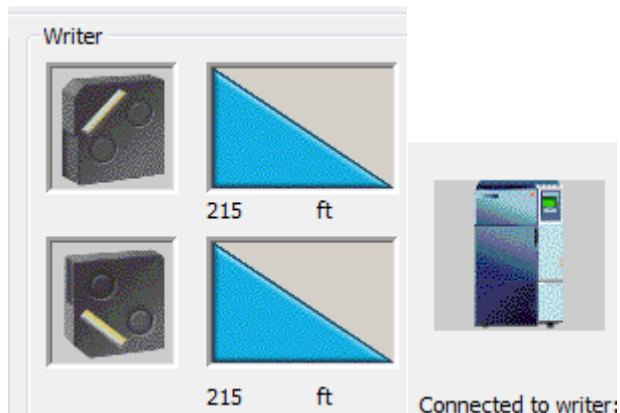


3. Advance the film 24in (2 feet)

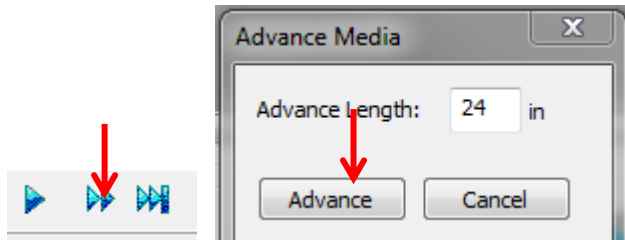

4. Click the Play button to Run the job, Job will start

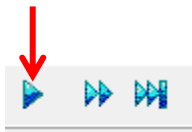

5. When Job is complete Click YES to complete the job or NO to continue writing film from the current image address

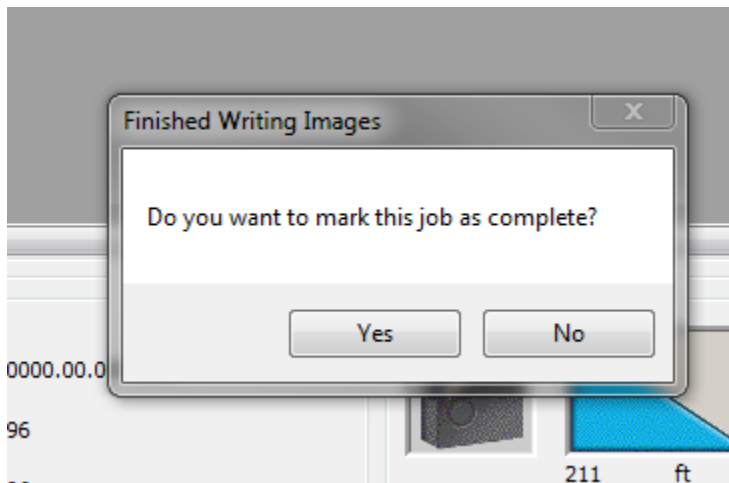


6. If the roll is ready to be removed for processing add 24"-36" of leader to ensure the images on the end do not get fogged.

-
- After Processing, fill out the top information of the form and attach the test to the bottom section of the form (Clear Portion & Image Portion of the test)

TOP Portion

| | | |
|---|-----------------------|-----------------|
| Label Information (example – Batch# 39550203) | Label Expiration date | |
| Archive Writer 4800 or 9600 (circle) “K” number | Processing Date | Evaluation Date |

BOTTOM Portion

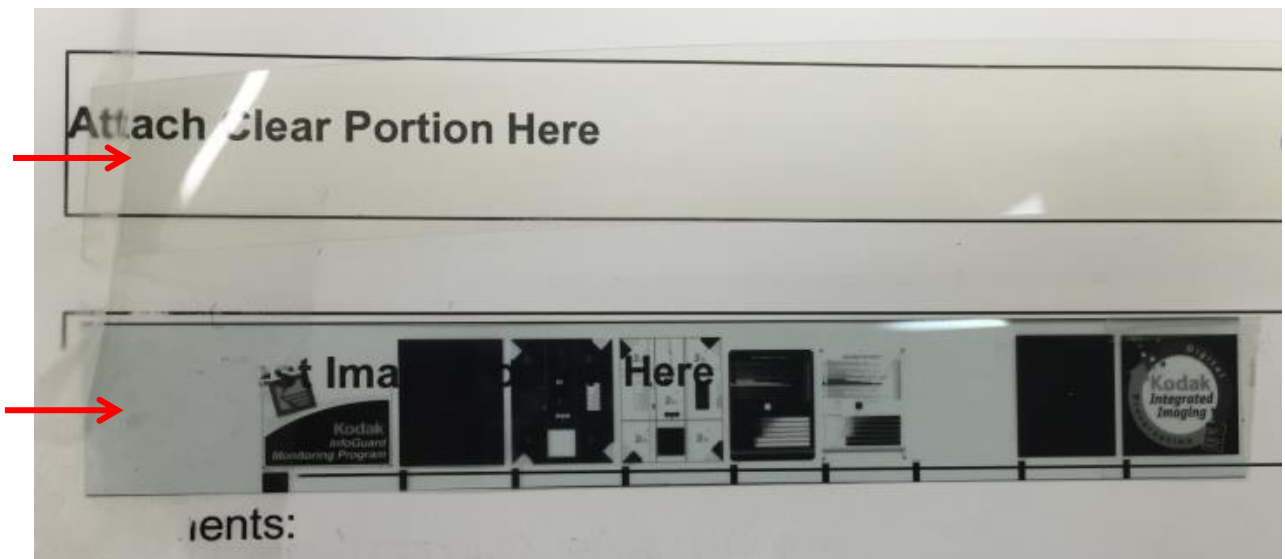

- Mail test form to:

Eastman Park Micrographics
6300 Cedar Springs Rd
Dallas, TX 75235

Attn: Patty De La Rosa
1-800-943-4561

- Test Results will be emailed within 2 business days of receiving the test